
Classroom Audio – GW

Both PC and projector are connected to the classroom speakers and controlled from a wall mounted audio panel. On the audio panel, there is a master volume and 4 separate input connections with individual volume controls. The PC is connected to input1, and the Projector is connected to input 2. The remaining auxiliary inputs can be used for other devices such as walkmans, tape recorders, etc. To use the PC's audio on the room speakers, make sure the master volume dial is not set to 0 then adjust the volume control on input1 to a desirable level. To use the projector's audio on the room speakers, make sure the master volume dial is not set to 0 then adjust the volume control on input2 to a desirable level. Please note the projector has its own volume control as well and should not be set to 0.

